 


## Solenoid Installation Instructions for Mazda GF4A-EL Lock-Up & EPC

1. Unplug transmission wire harness from old solenoid.
2. Remove old solenoid.
3. Refer to illustration below for solenoid placement.
4. Insert new solenoid assembly into valvebody.
5. Plug in original wire harness.

**NOTE:** This is a P.W.M. lock-up type solenoid. Do NOT substitute this unit for an On/Off type solenoid. Permanent transmission or ECM damage may occur.

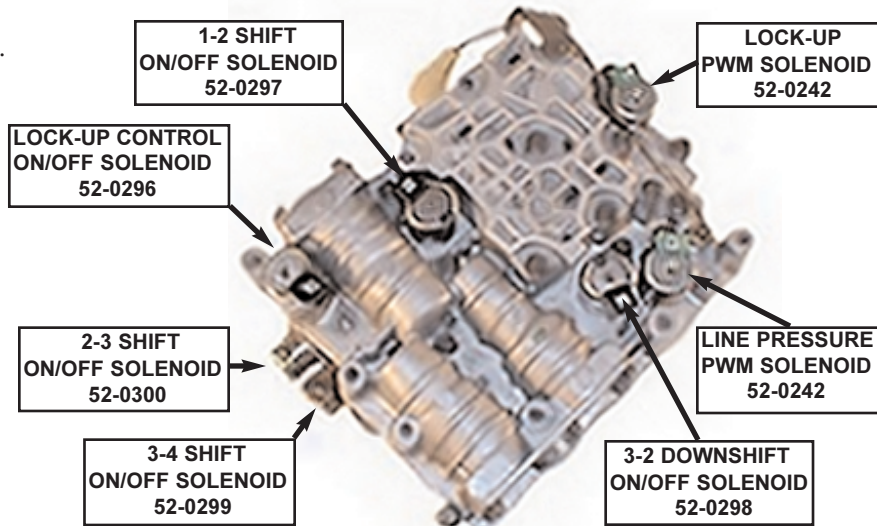 


Form #4227, Rev. B, 06-17-02

## Solenoid Installation Instructions for Mazda GF4A-EL Lock-Up & EPC

1. Unplug transmission wire harness from old solenoid.
2. Remove old solenoid.
3. Refer to illustration below for solenoid placement.
4. Insert new solenoid assembly into valvebody.
5. Plug in original wire harness.

**NOTE:** This is a P.W.M. lock-up type solenoid. Do NOT substitute this unit for an On/Off type solenoid. Permanent transmission or ECM damage may occur.

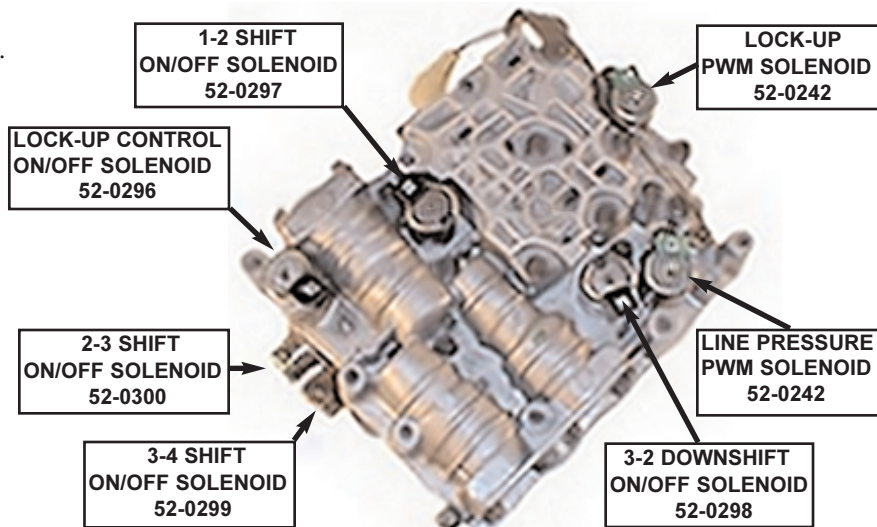 


Form #4227, Rev. B, 06-17-02

## Solenoid Installation Instructions for Mazda GF4A-EL Lock-Up & EPC

1. Unplug transmission wire harness from old solenoid.
2. Remove old solenoid.
3. Refer to illustration below for solenoid placement.
4. Insert new solenoid assembly into valvebody.
5. Plug in original wire harness.

**NOTE:** This is a P.W.M. lock-up type solenoid. Do NOT substitute this unit for an On/Off type solenoid. Permanent transmission or ECM damage may occur.

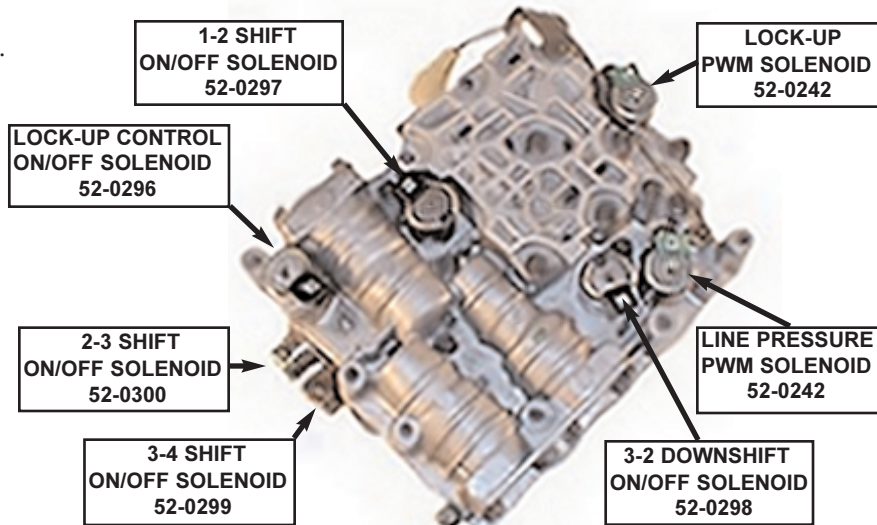

Form #4227, Rev. B, 06-17-02