



Installation Instructions for Rostra's Quick-Link

1. Strip the transmission wire harness to 3/8" (9.5 mm) length. Use the grip portion of the connector as a guide.

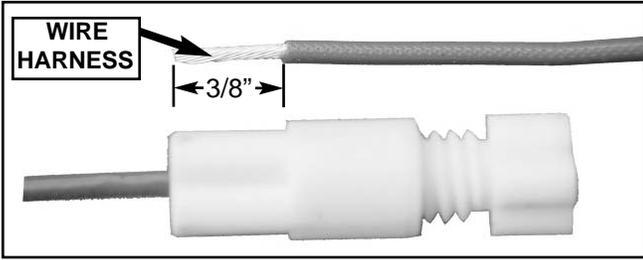


NOTE: If the strip length is too short, the connector will not function properly. The stripped portion of the wire must extend beyond the locking mechanism.

2. Slip the screw cap over the portion of the wire harness just stripped.

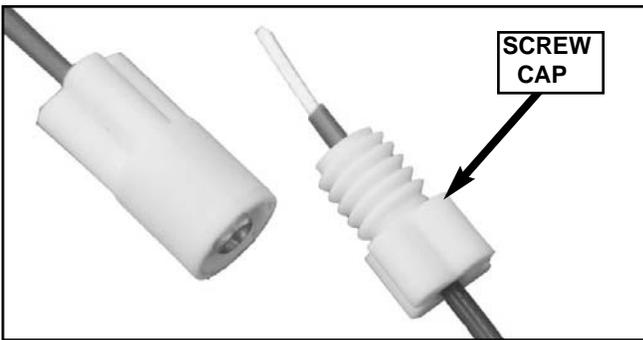


3. Insert the stripped wire into the center of the metal sleeve on the connector as shown.

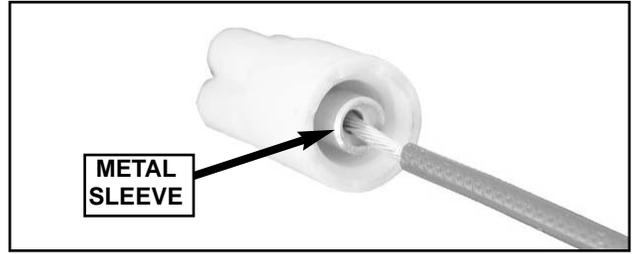

NOTE: Proper strip length is critical.


4. Screw the cap into the connector until they are flush. Installation is complete.

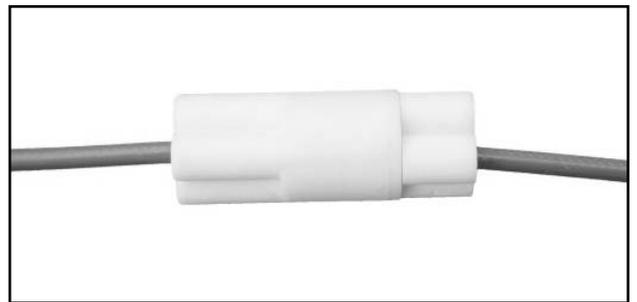

Form #5189, Rev. A, 11-24-08


Installation Instructions for Rostra's Quick-Link

1. Strip the transmission wire harness to 3/8" (9.5 mm) length. Use the grip portion of the connector as a guide.

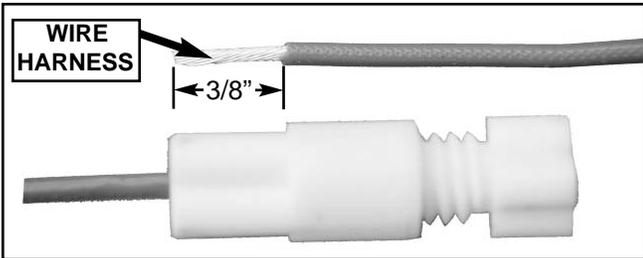


NOTE: If the strip length is too short, the connector will not function properly. The stripped portion of the wire must extend beyond the locking mechanism.

2. Slip the screw cap over the portion of the wire harness just stripped.

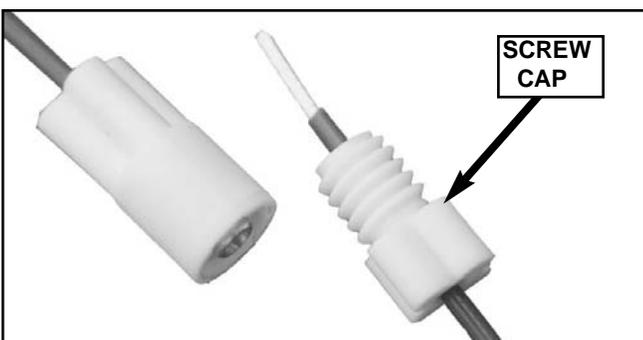

3. Insert the stripped wire into the center of the metal sleeve on the connector as shown.

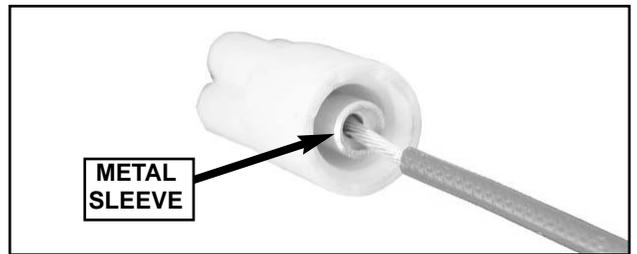

NOTE: Proper strip length is critical.


4. Screw the cap into the connector until they are flush. Installation is complete.



Form #5189, Rev. A, 11-24-08

Installation Instructions for GM TH350 Lock-up Solenoid

NOTE: For single wire applications, remove Rostra's Quick-Link connector attached to black wire. Strip 1/4 inch (6 mm) from end of cut wire and attach supplied ring terminal by crimping. Attach ground wire to solenoid mounting bolt.

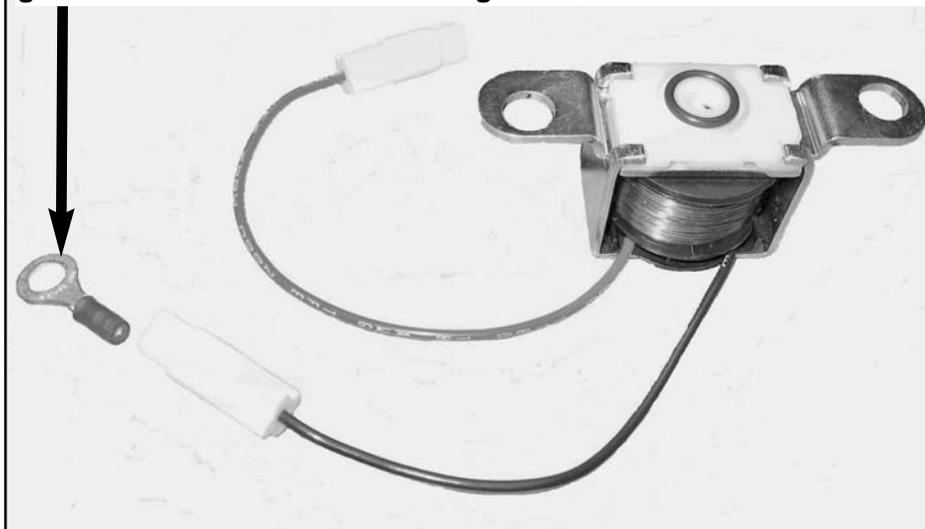

Installation Instructions for GM TH350 Lock-up Solenoid

NOTE: For single wire applications, remove Rostra's Quick-Link connector attached to black wire. Strip 1/4 inch (6 mm) from end of cut wire and attach supplied ring terminal by crimping. Attach ground wire to solenoid mounting bolt.

